

## **ATTN!**

IKI protective baseplates purpose is to set the heater into a straight and horizontal position. You may only open and adjust each one of the "trim screws" in the baseplate legs a maximum of 10mm.

